

## PutErrorString

**Category:** Error

**Description:** Displays the current/last error message in the large font.

**Inputs:**

**Registers:** None

**Flags:** None

**Others:** (errNo) contains the error code, as defined in ti83plus.inc

**Outputs:**

**Registers:** None

**Flags:** None

**Others:** The error message such as “ERR:OVERFLOW” is shown in the upper-left of the display, in the large font.

**Registers destroyed:** All

**Remarks:** None

**Example:**